

## EXTRACTION OF ACETIC ACID FROM BENZENE BY USING WATER AS A SOLVENT

SANDEEP KUMAR SAMANTA

RAJASTHAN TECHNICAL UNIVERSITY, KOTA

### PROBLEM STATEMENT:

Extraction of Acetic Acid from benzene by using water as a solvent.

#### ➤ OBJECT USED:

1. Distillation column
2. Material Stream
3. Recycle block
4. Mixer

#### ➤ DESCRIPTION:

##### I. Abstract:

Extractive Distillation technique for the separation of Acetic Acid and Benzene by using the solvent of water. Two columns are used, Bottom product from the first column is Acetic Acid and other column is for Feed recovery where Water is separated from Bottom. The mixture from the top of second column is recycled back with the feed stream with makeup.


##### II. Introduction:

Extractive distillation is a commonly used method for the separation of azeotropic mixture. In this method, a third component is added into the system as solvent to alter the relative volatility of the component to be

separated. With the presence of the suitable solvent, the relative volatility of the original two components can be enhanced.

### III. Flowsheet Description:

This process content a two-column design with a solvent. The reproduced flowsheet is shown below. Among the various solvent available like DMSO, DMF here Water is used as it is easily and cheaply available. In below figure column-I is Extractive column and column-II is for recovery of Benzene. The mixture of Acetic Acid-Benzene along with solvent is fed to column-I, the bottom product of column-I is our desired product i.e. 97 wt. % Acetic Acid. The top product is fed to column-II for further separation where Water is separated from mixture and separated Water is then obtained from the top with 88 wt. % purity. This top product mixture is again recycled to column-I after adding make-up stream to account for the loss in distillates of column-I and column-II. Fresh feed flow rate is kept at 14.48 mol/s containing 0.5 wt. % Benzene and rest Acetic Acid at a temperature of 298.15 K. The pressure of both the columns are maintained at 101325 Pa.

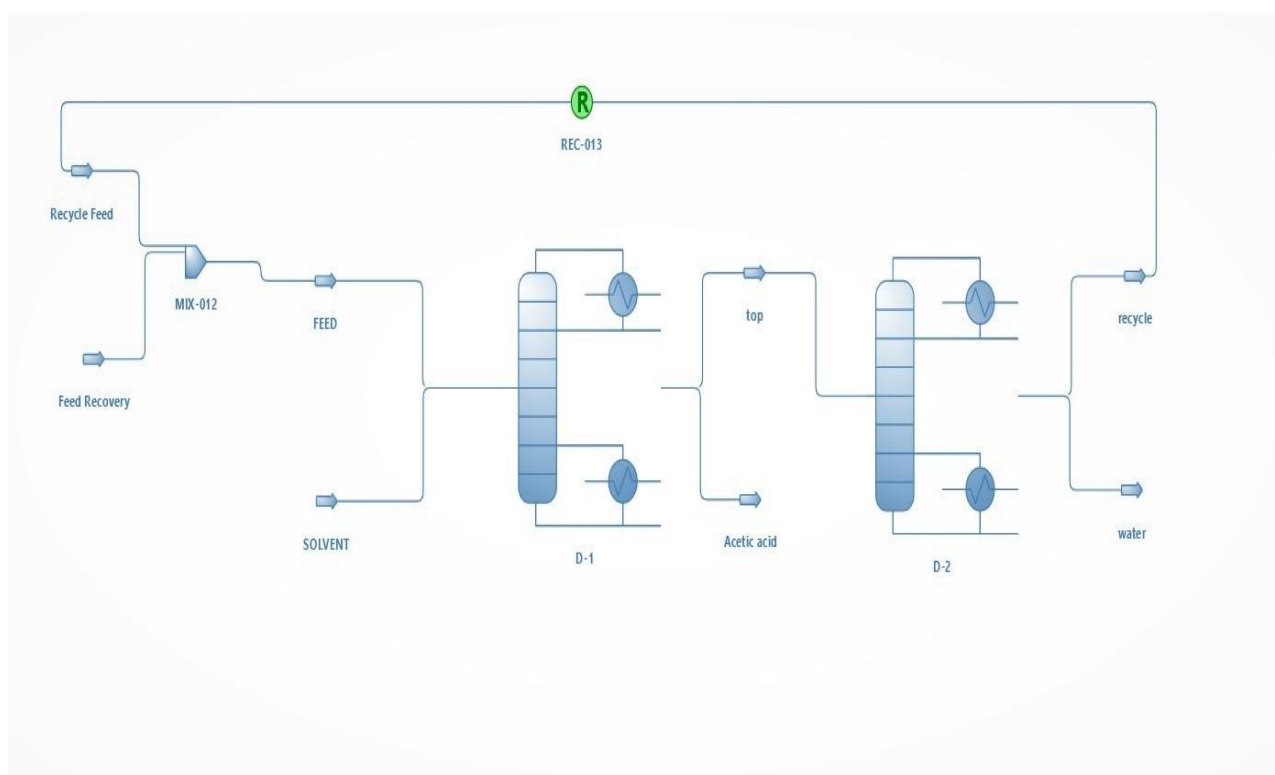

**Flowsheet of Extractive Distillation of Acetic acid-Benzene Solution**

The property table for the flowsheet is given below:

Object	Feed	Solvent	Feed Recovery	Top	Acetic Acid	Water	Units
Temp	309.775	373.132	298.15	370.545	390.765	370.666	K
Pressure	101325	101325	101325	101325	101325	101325	Pa
Molar Flow	17.4196	55.5084	14.4756	65.752	7.17605	62.8251	mol/s
Molar Fraction (Mixture)/ Acetaldehyde	0.456422	0	0.5	0.120919	3.7354E-07	0.115342	
Molar Fraction (Mixture)/ Toluene	0.415613	0	0.5	0.002061	0.99	0.0021249	
Molar Fraction (Mixture)/ Water	0.127965	1	0	0.877019	0.009999	0.882533	

**Table-1 Streamwise Result for Extractive Distillation of Acetic acid-Benzene Solution**

### ➤ REFERENCES:

Unit Operations of Chemical Engineering by Warren L. McCabe, Julian C. Smith, Peter Harriott, 7 Edition, McGraw Hill Education.